

SECTOR
SMART

We thank you for the confidence that you have shown in us by choosing the SECTOR brand. To enable you to use your watch to the best advantage, we recommend that you carefully read the instructions in this leaflet.

ENG





ALARM



CHIME



1/100 SEC



DATE



WATER



12/24 HR



LIGHT


Screen and button functions




- ▶ Press S1 to turn on EL Luminescence 3 seconds.
- ▶ Press S2 to change the mode format.
- ▶ LCD time display: Hour-Minute-Second-Week-Month-Day
- ▶ 12/24 time.
- ▶ The maximum of stopwatch: 23"59"59.

Note: SU: Sunday MO: Monday TU: Tuesday
 WE: Wednesday TH: Thursday FR: Friday
 SA: Saturday


Mode Operation

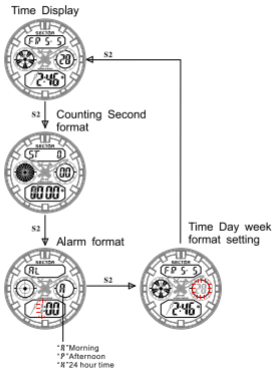


Counting Seconds Operation

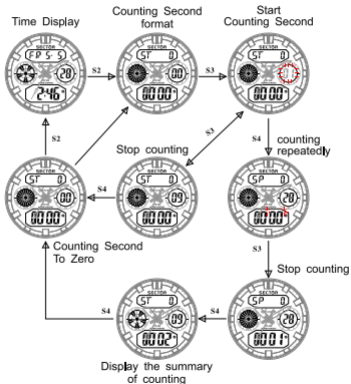

Alarm/Chime Function Operation

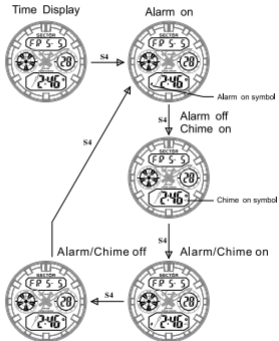

Alarm Setting Operation

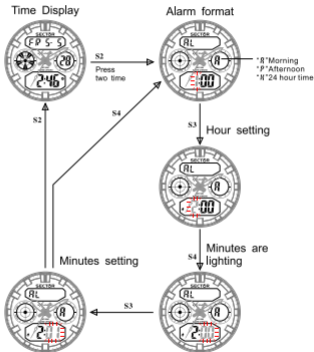

English Chinese abbreviation

H: 24 hour time

A(AM): Morning P(PM): Afternoon

ALM(ALARM): Alarm

CHM(CHIME): Chime

SPL(SPLIT): Counting second format

Hand- time Setting



The head / hand
- time setting

Lovely Reminder

1. Please don't try to discompose the digital watch without professional technicians.
.....
2. Pressing buttons is not allowed during swimming & diving.
.....
3. When figure out mist inside the glass , please contact technicians for fixing to avoid destroying parts.
.....
4. Please try to avoid strong crash.
.....
5. Don't put any chemical on watch dial, use water and soft cloth for cleaning if needed.
.....
6. Avoid to put the watch on arm under strong magnet & static electricity.
.....
7. Remove batteries when not in use or discharged.
.....
8. Requires 1 CR2016 and SR626SW battery (included).





sviglia



suono



crono



data



WR



12/24 H



illuminazione

DISPLAY E FUNZIONALITÀ PULSANTI




- ▶ premere S1 per illuminare il display per 3 secondi
- ▶ premere S2 per cambiare la modalità
- ▶ visualizzazione ora display LCD: ore-minuti-secondi-settimana-mese-giorno
- ▶ formato 12/24 ore
- ▶ tempo massimo cronometro: 23' 59" 59

note: domenica-lunedì-martedì-mercoledì-giovedì-venerdì-sabato

MODALITÀ DI FUNZIONAMENTO

visualizzazione ora

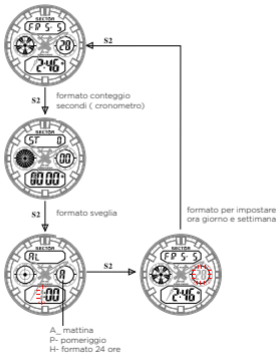


FUNZIONE CRONOMETRO


display standard

formato cronometro

inizio conteggio cronometro

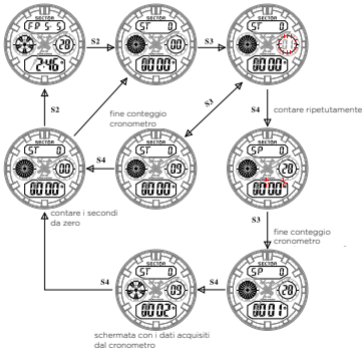


FUNZIONE SVEGLIA/ALLARME

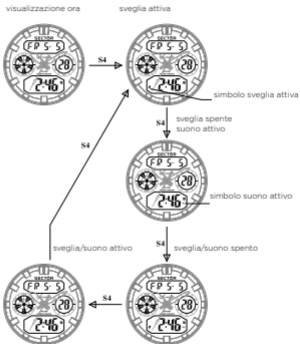


IMPOSTARE LA SVEGLIA

visualizzazione ora

formato sveglia

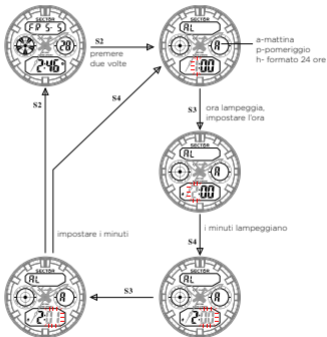

ORA STANDARD E OPERAZIONI DEL GIORNO

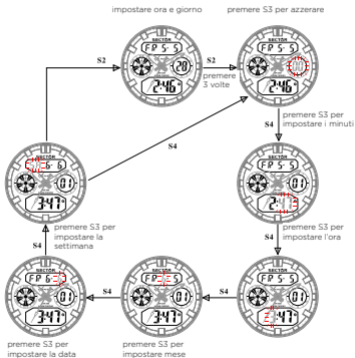

ABBREVIAZIONI CINESE/INGLESE

H: Formato 24 ore
A(AM) mattina- P/PM pomeriggio
alm sveglia
chm suono
spl : cronometro

IMPOSTARE L'ORA MANUALMENTE



ESTRARRE LA CORONA E IMPOSTARE L'ORA
RIPORTARE LA CORONA ALLA POSIZIONE INIZIALE

PROMEMORIA

- 1- non provare a smontare l'orologio digitale senza l'aiuto di un professionista
2. non premere i pulsanti mentre l'orologio è in acqua
3. se appare del vapore all'interno dell'orologio contattare l'assistenza per intervenire tempestivamente ed evitare di danneggiare alcune componenti
- 4 evitare urti
- 5 non usare prodotti chimici sul dial dell'orologio
6. non esporre l'orologio a forze magnetiche o energie statiche
- 7 rimuovere le batterie una volta scariche (?)
- 8 sono necessarie le batterie XXX-XXX (incluse)

SECTOR
SMART