



Instruction Manual

SECTOR
NO LIMITS

We thank you for the confidence that you have shown in us by choosing the SECTOR brand. To enable you to use your watch to the best advantage, we recommend that you carefully read the instructions in this leaflet.



ENG



Screen and Buttons function




- Press S1 to turn on EL luminescence 3 seconds
- S2 to change the Mode format.
- LCD time display: hour-minute-second-week- month-day
- 12/24 time
- The maximum of stopwatch: 23"59"59.


Note: SU:sunday MO:monday TU:tuesday WE:wednesday
TH:thursday FR:friday SA:saturday

INSTRUCTION MANUAL J981AD


Counting seconds operation

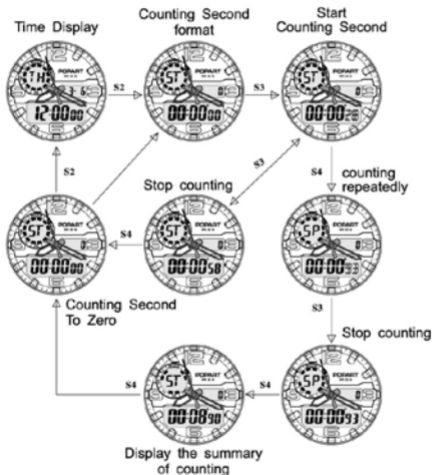


Mode Operation

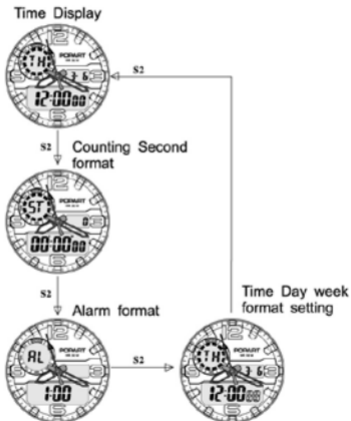

Alarm/Chime Function Operation

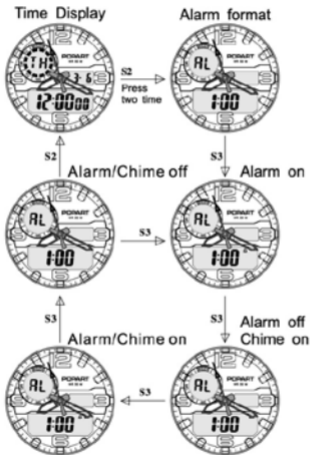

Alarm Setting Operation

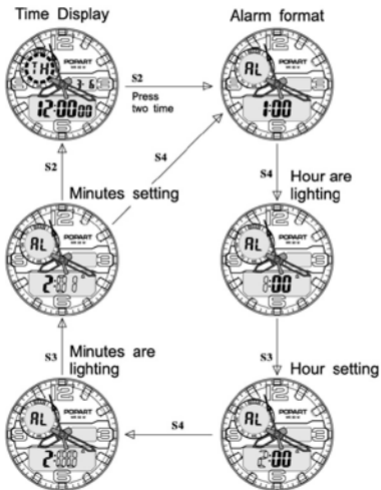

English Chinese abbreviation

H: 24 hour time


A(AM): Morning P(PM): Afternoon

ALM(ALARM): Alarm

CHM(CHIME): Chime

SPL(SPLIT): Countig second format

English Chinese abbreviation

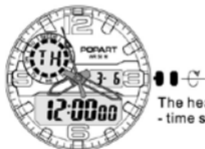

The head / hand
- time setting

- Pulling out the button on set up time
- After adjusted pullin back the position

Lovely Reminder

1. Please don't try to discompose the digital watch without professional technicians.
2. Pressing buttons is not allowed during swimming and diving.
3. When figure out mist inside the glass, please contact technicians for fixing to avoid destroying parts.
4. Please try to avoid strong crash.
5. Don't put any chemical on watch dial, use water and soft cloth for cleaning if needed.
6. Avoid to put the watch on arm under strong magnet and static electricity.
7. Remove batteries when not in use or discharged.
8. Requires 1 CR2016 and SR626SW battery (included).

The logo consists of a white square outline centered on a black background. Inside the square, the letters "ITA" are written in a white, serif font.

ITA



Funzioni dei pulsanti e dello schermo




- Premere S1 per 3 secondi per accendere la luce
- Premere S2 per cambiare la modalità del formato
- LCD display orario: Ora-Minuti-Secondi-Settimana-Mese-Giorni
- 12/24 ore
- Cronometro fino a un massimo di: 23'59'59'


Nota bene: MO: Lunedì TU: Martedì WE: Mercoledì TH: Giovedì FR: Venerdì SA: Sabato SU: Domenica

MANUALE DELLE ISTRUZIONI J981AD


Operazione di conteggio dei secondi

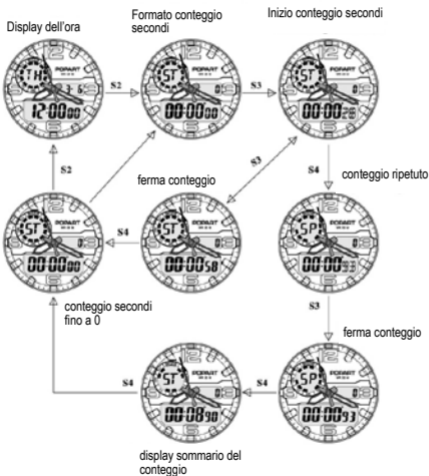


Modalità operativa

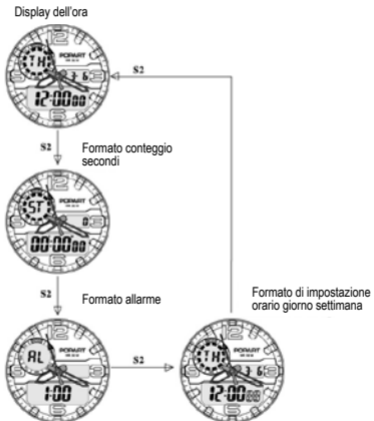

Funzione operativa sveglia/allarme

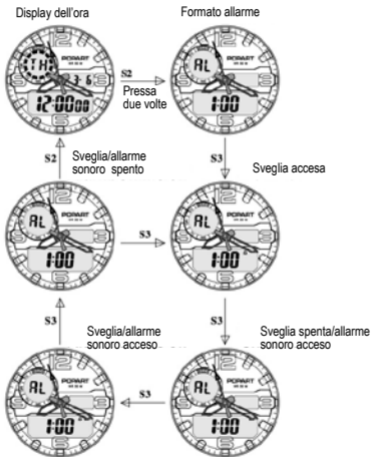

Operazione impostazione sveglia

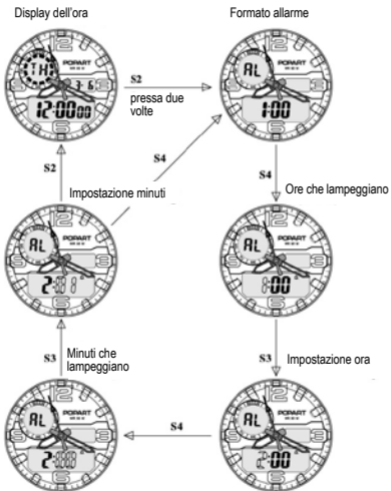

Abbreviazioni

H:ora

A: mattina P: sera

ALM: sveglia

CHM: allarme sonoro

SPL: formato conteggio secondi

Abbreviazioni



Impostazione manuale dell'ora

- Tirare fuori il pulsante e impostare l'orario
- Rimettere il pulsante nella posizione precedente

Da tenere a mente

- 1 Evitare di aprire le componenti digitali dell'orologio senza il supporto di tecnici qualificati
- 2 Evitare di premere i bottoni quando si è sott'acqua
- 3 Se si trova della nebbiolina all'interno del vetro, contattare subito un tecnico specializzato
- 4 Evitare urti
- 5 Non usare sostanze chimiche per pulire l'orologio, ma utilizzare un panno e dell'acqua
- 6 Evitare di indossare l'orologio in condizione di forte energia elettromagnetica
- 7 Rimuovere la batteria quando è scarica
- 8 Richiede una batteria modello SR626SW (ne troverete già una all'interno dell'orologio).