

**SECTOR**  
NO LIMITS



We thank you for the confidence that you have shown in us by choosing the SECTOR brand. To enable you to use your watch to the best advantage, we recommend that you carefully read the instructions in this leaflet.

ENG

## Screen and button functions




- Press S1 to turn on EL Luminescence 3 seconds
- Press S2 to change the mode format
- LCD time display: Hour-Minute-Second-Week-Month-Day
- 12/24 time


-The maximum stopwatch: 23"59"59"

Note: SU: sunday Mo:monday TU:Tuesday  
WE: wensday TH:Thursday FR: friday  
SA: saturday


## Mode operation

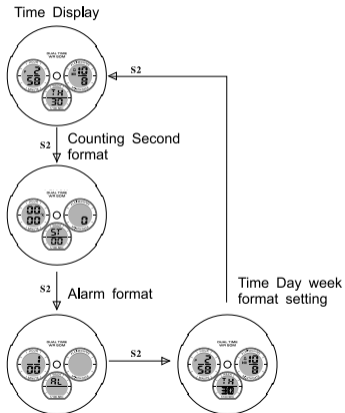

## Counting Seconds Operation

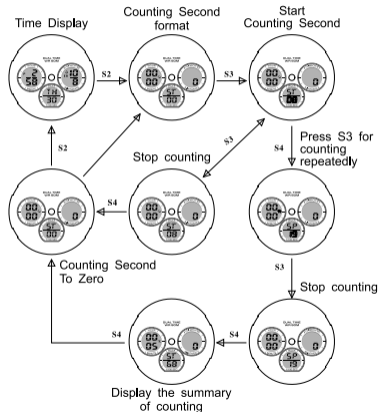

## Alarm/ Chime Function Operation

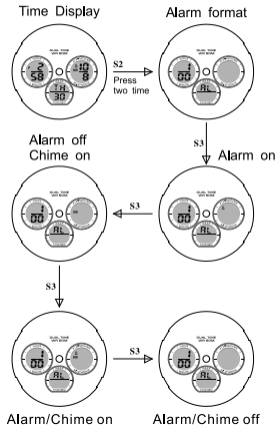



## English Chinese abbreviation

H: 24 hour time


A(AM) : Morning P(PM): Afternoon

ALM (ALARM): Alarm

CHM: Chime

SPL(SPLIT): Counting second format

## Impostazioni manuali

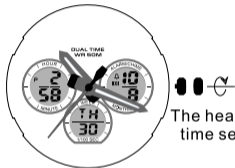

The head / hand  
time setting

- Pulling out the button and set up time.
- After adjusted pulling back the position.

## Lovely Reminder

- 1 Please don't try to discompose the digital watch without professional technicians.
- 2 Pressing buttons is not allowed during swimming & diving.
- 3 When figure out mist inside the glass, please contact technicians for fixing to avoid destroying parts.
- 4 Please try to avoid strong crash.
- 5 Don't put any chemical on watch dial, use water and soft cloth for cleaning if needed.
- 6 Avoid to put the watch on arm under strong magnet and static electricity.
- 7 Remove batteries when not in use or discharged.
- 8 Requires 1 CR2016 and SR626 battery (included).

The logo consists of the letters 'ITA' in a white, sans-serif font, centered within a white square border on a dark background.

ITA

## Funzioni dei bottoni e dello schermo




- Premi S1 per accendere EL Luminescence 3 secondi
- Premi S2 per cambiare il formato
- Orario del display LCD: Ore-Minuti-Secondi-Settimana-Mese-Giorno
- 12/24 ora


- Tempo massimo del cronometro: 23"59"59"

Note: SU: domenica Mo:Lunedì TU:Martedì  
WE: Mercoledì TH:Giovedì FR: Venerdì  
SA: Sabato


# Impostazioni

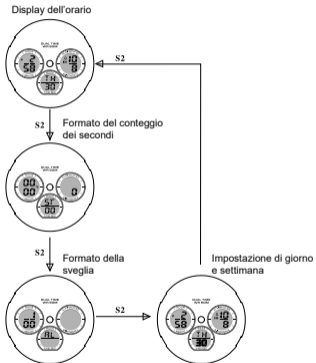


# Conteggio dei secondi

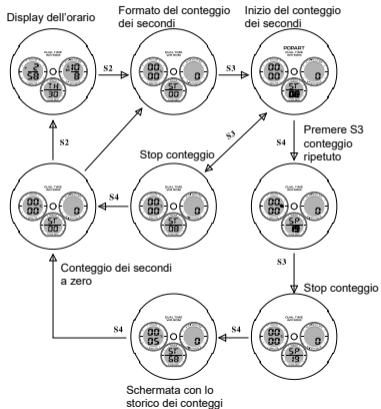

## Funzioni della Sveglia/ Suoneria

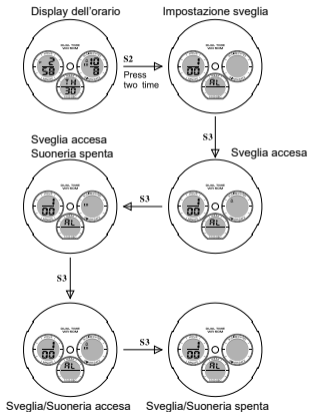


## Impostazioni della sveglia

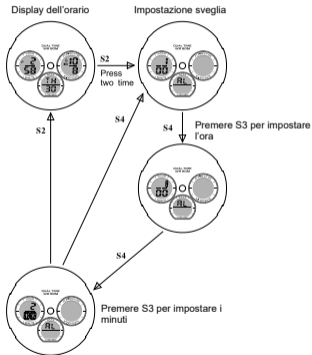



## Impostazioni manuali

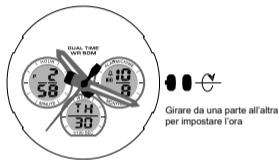

- Estrarre il bottone e impostare l'ora.
- Dopo aver impostato l'ora premere il bottone portandolo alla posizione iniziale.

## Accorgimenti

- 1 Non cercare di discomporre l'orologio senza dei tecnici professionisti.
- 2 Non premere i bottoni durante il nuoto o l'immersione.
- 3 Se vedete della nebbia dentro il vetro, contattate i tecnici per informazione prima di rompere delle parti.
- 4 Evitate forti impatti.
- 5 Non utilizzare prodotti chimici per pulire l'orologio, ma solo acqua e dei panni soffici.
- 6 Non mettere l'orologio al polso sotto grandi cariche magnetiche o elettricità.
- 7 Rimuovere le batterie quando non in uso o scarico.
- 8 Richiede la batteria 1 CR2016 e SR626 (inclusa).

**SECTOR**  
NO LIMITS