

Digital Day Clock

User Manual

Important Note: the buttons on the back of your clock are labeled with symbol only , please use the clearly labeled photo illustration below to identify the appropriate button functions to set your clock.

SET TIME:

Press the **MENU** button to access the set up screen.


Press the **RIGHT/LEFT** button to highlight the 2nd line to be modified.

A small blue highlighted square box will appear over the number to be changed.

Use the **UP/DOWN** button to adjust the number

After the modifications are completed, press **OK** button to save.

Press the **MENU** button to go back to the main screen.

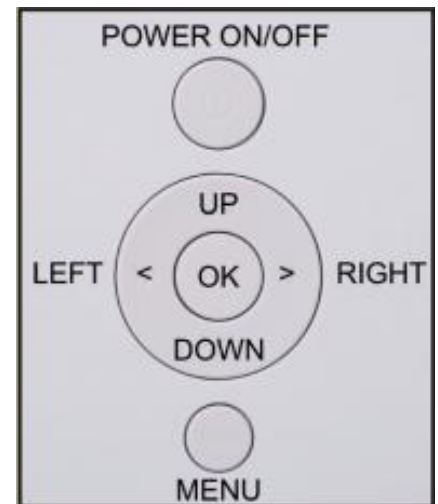

SET DATE:

Press the **MENU** button to access the set up screen.

Press the **DOWN** button to highlight the 3rd line.

Press the **RIGHT/LEFT** button to adjust the number

After the modifications are completed, press the **OK** button to save.

Press the **MENU** button to go back to the main screen.

TIME MODE:

Press the **MENU** button to access the set up screen.

Press the **DOWN** button to highlight the 4th line.

Press the **RIGHT/LEFT** button to switch between:

12 Hour (am/pm)

24 Hour(Military time)

Press the **MENU** button to go back to the main screen.



DATE MODE:

Press the **MENU** button to access the set up screen.

Press the **DOWN** button to highlight the 5th line.

Press the **RIGHT/LEFT** button to switch between:

Month-Day-Year (standard U.S. mode)

Day-Month-Year (standard European mode)

Press the **MENU** button to go back to the main screen.

LANGUAGE: (scroll down; the language option is located below the 1st line)

Press the **MENU** button to access the set up screen.

Press the **DOWN** button to highlight the 1st line.

Press the **RIGHT/LEFT** button to select a language

(choice of: English,French,German,Dutch,Italian,Polish,Spanish...)

Press the **MENU** button to go back to the main screen.

BRIGHTNESS: (scroll down; the auto dimming option is located below the 6th line)

Press the **MENU** button to access the set up screen.

Press the **DOWN** button to highlight the 6th line.

Press the **RIGHT/LEFT** button to select

(choice of: auto,off,mid,low)

Press the **MENU** button to go back to the main screen.

ALARMS: (scroll down; the language option is located below the 9th line)

Press the **MENU** button to access the set up screen.

Press the **DOWN** button to highlight the 9th line.

Press the **RIGHT/LEFT** button to select a language

(choice of: 5 alarms and 3 reminders...)

Press the **MENU** button to go back to the main screen.

Volume: (scroll down; the language option is located below the 7th line)

Press the **MENU** button to access the set up screen.

Press the **DOWN** button to highlight the 7th line.

Press the **RIGHT/LEFT** button to select a language

(choice of voice level : 0-40...)

Press the **MENU** button to go back to the main screen.

Note:

To make several modifications to set up screen , after each change simply press **DOWN** button to highlight the next field that you would like to modify and follow the instructions above.

After all the modifications are completed, press the **MENU** button to go back to the main screen.