




CHRONOSTAR

ENG

USER MANUAL

C-Smart Fitness Tracker




C-SMART

CONTENTS

Product Instructions
Remove Strap and Charge Mode
Download APPs
Connecting Device
App Interface Introduction
Lighten Up the Fitness Tracker
Fitness Tracker Functions Introduction
Parameter

PRODUCT INSTRUCTION

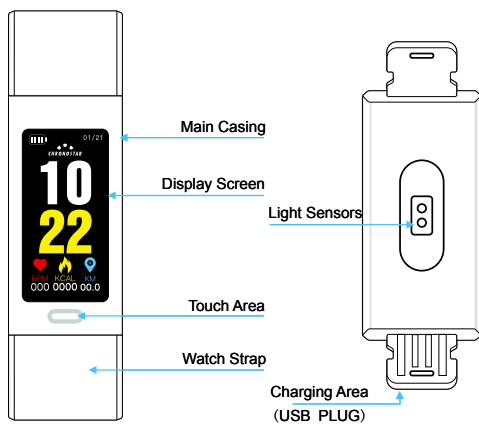


The bracelet transmits fitness data. You will track your daily activity and you can make a training schedule. Additionally, functions of your smartphone can be shown or operated on bracelet. The bracelet is waterproof (Ip67) and you do not need to take it off when washing your hands or taking a shower

IP67 = 3 atm

REMOVE STRAP AND CHARGE MODE


Step 1.

The Bottom of the tracker shows you where the charging port is. There you can take out the Strap by pushing the bottom and simultaneously pull tracker and bracelet apart

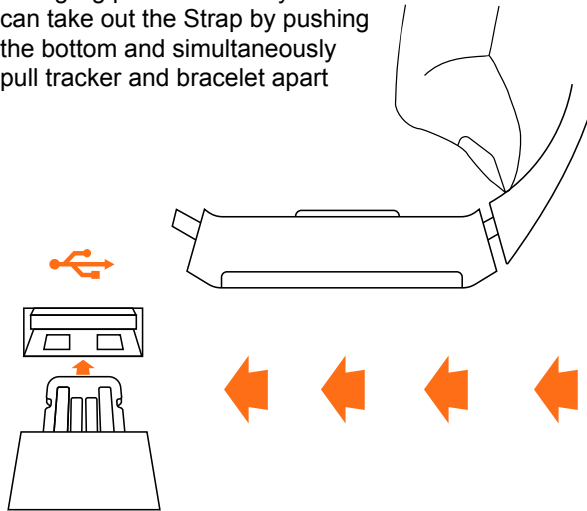

Step 2.

We use a USB port to charge the bracelet. Please note ! Data transmission POSSIBLE via USB

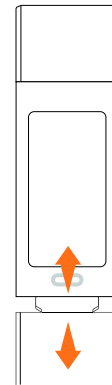

While charging the battery symbol will keep flashing. When the battery is fully charged the symbol shows a fully charged battery.

DOWNLOAD APPs

Download APPs by scanning the below QR code or searching for (C-Smart) in APP Store/Google Play, etc., the APP will lead you to register an account. (The language of "C-Smart" APP will automatically switch depending on your smartphone's language.)



IOS system



Android system



[C-Smart] APP

CONNECTING DEVICE

Once fully charged, turn on the fitness tracker by pressing the touch area for 3 seconds, activate the Bluetooth of your mobile phone. When you first open the "C-Smart" APP, the APP will lead you to bind the fitness tracker, or "Click to connect device" on the main interface of the APP.

Smartband Unpair




Smartband paired



LIGHTEN UP THE FITNESS TRACKER

Press the touch area, or activate the “Raise wrist to wake screen” Function in the APP Function Setting, then turn over the wrist and the fitness tracker will brighten automatically.

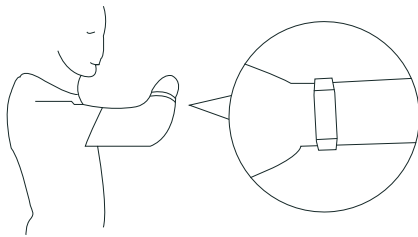

Sensitivity Adjustment Diagram



FUNCTION INTRODUCTION

1. Introduction of Fitness tracker functional interfaces

Press the touch area and you can change between multiple functional interfaces.



TIME



STEPS




HEART RATE




BLOOD PRESSURE




SPORT

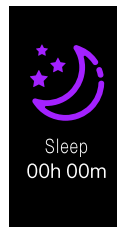

SLEEP

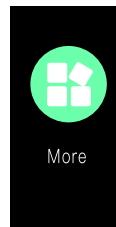


MORE

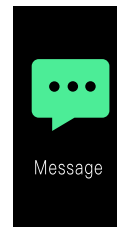

MESSAGE


TIME

Press for 3 seconds on TIME interface .Smartband has 4 different watch faces for your selection

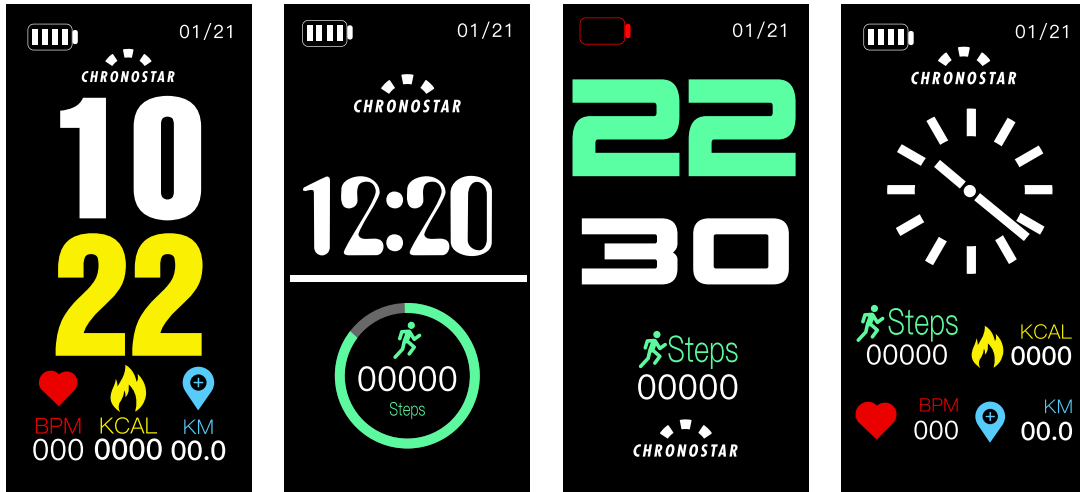


STEPS

Press for 3 seconds on STEPS interface jump in data page. You can read you steps page and total Steps count, Kcal and Distance.

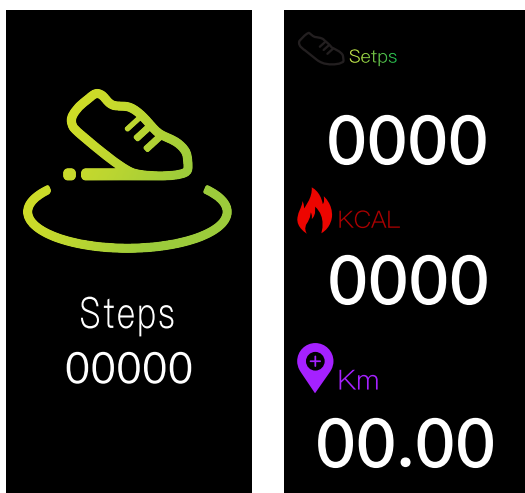


HEART RATE

To measure your heart rate, You need to wait for approximately 10 seconds, then data will appear. In order to ensure more accuracy, you can wait for about 30 seconds.

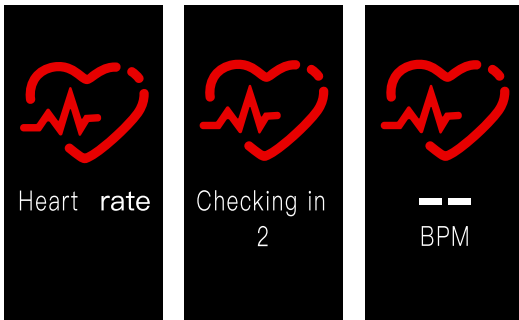

BLOOD PRESSURE

To measure your Blood pressure. You need to wait for approximately 10 seconds, then data will appear. In order to ensure more accuracy, you can wait for about 30 seconds.

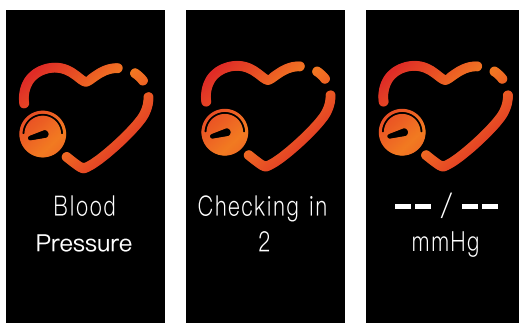

DISCLAIMER BLOOD PRESSURE

The method of capturing the blood pressure through an optical sensor used by this smartband does not reach the level of precision and accuracy of a professional medical device, nor can it guarantee the equivalent stable readings. The smartband cannot replace a medical device in its function of detecting or diagnosing pathologies, heart or other diseases.


If you suspect any anomaly, always consult your doctor and in case of emergency, immediately contact emergency services in your area.

Morellato group assumes no responsibility for any claim that may arise from the use and/ or interpretation that the user of the device and/ or third parties may make of the blood pressure information provided by their devices.

SPORTS


Press and hold for 3 seconds on each SPORTS interface .Smartband has 8 different sports mode.Then you can press touch area to change between Sports Data>Pause>Exit>interfaces.

The smartband interface will display the time, Heart Rate, Running Distance, Calories and steps in real time. While in the pause or exite interfaces, Press the touch area for 3 seconds to exit mode.

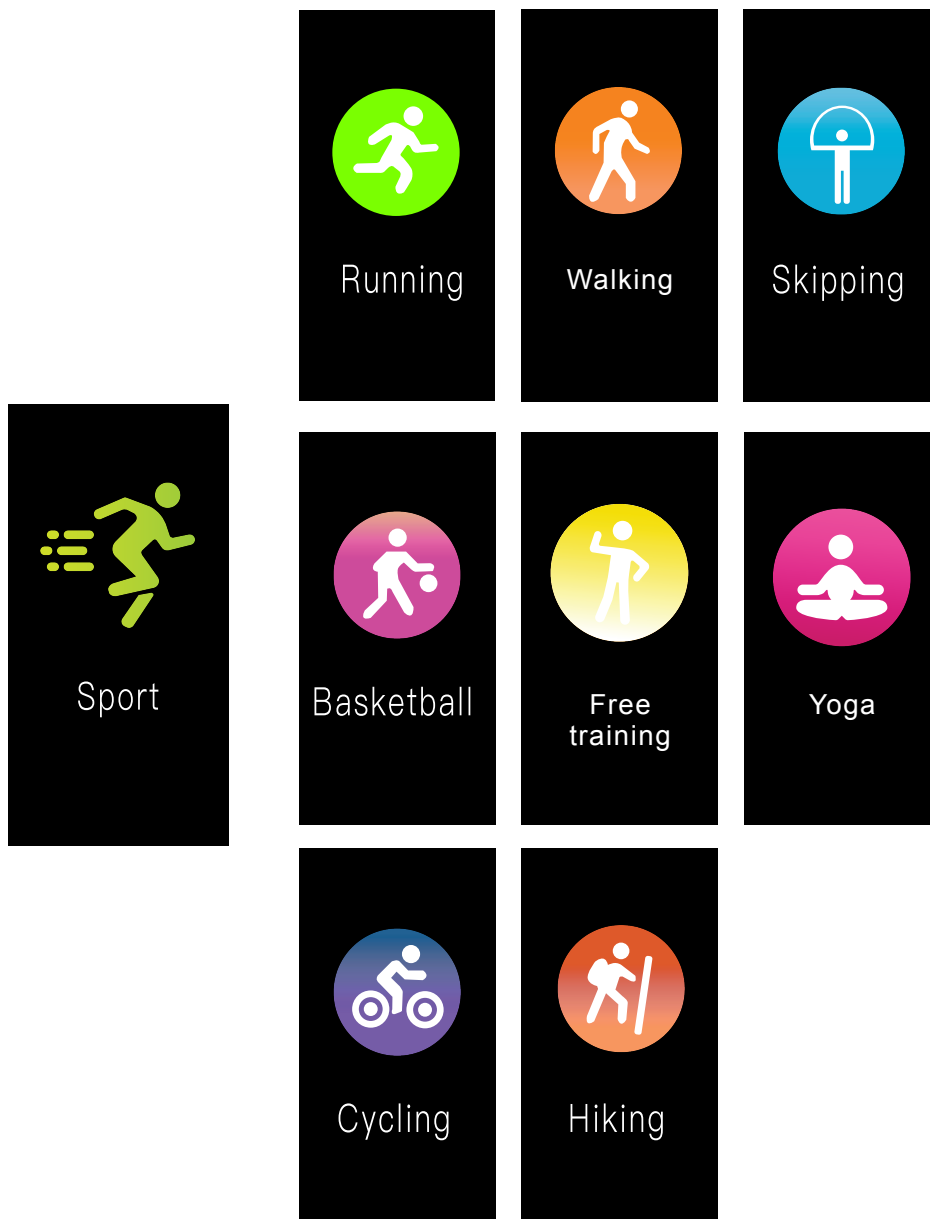


SLEEP

Press Sleep Monitor icon, Wear the smartband while sleeping and connected with the App, Sleep Record will show detail on the Phone App.

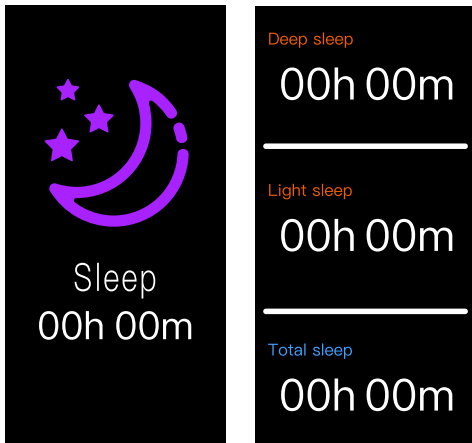

MESSAGE




Activate Notifications on C-Smart App and also on phone settings, you will get your notifications show directly on the smartband.

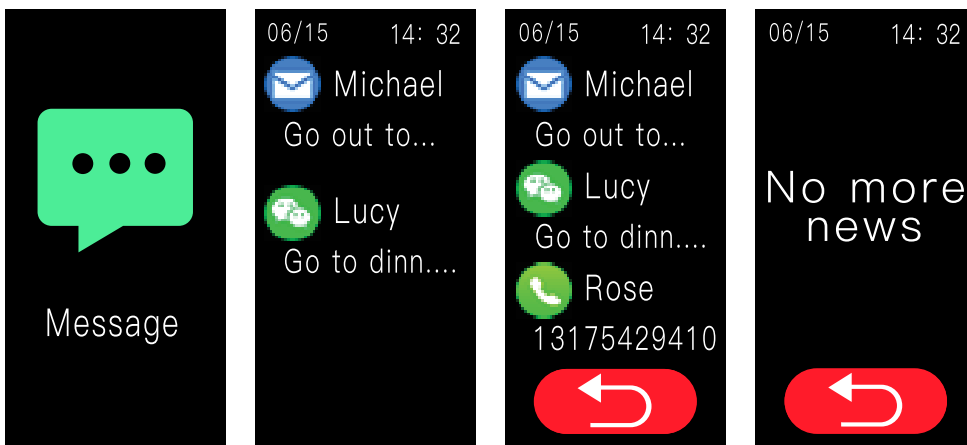

MORE


Press for 3 seconds on MORE interface. Smartband has 10 different Functional modes. Enter the Mode you want to select. You can press touch area to change between Alarm >Find Phone>S.....etc

To go back to the menu,you can press the touch area for 3 seconds.

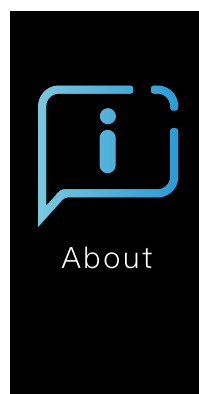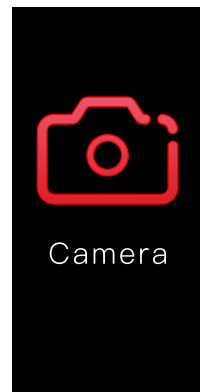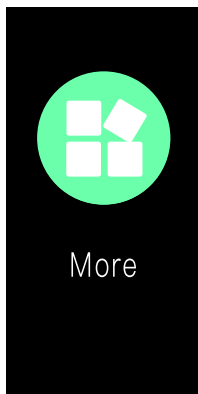


ALARM

When the set time arrives, the device will vibrate and display the Alarm Clock Icon.

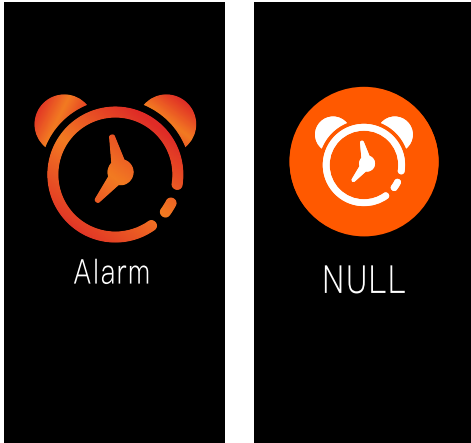


FIND PHONE

Press Find Phone, After you pair the smartband. The Phone will Ringing and Vibrate.

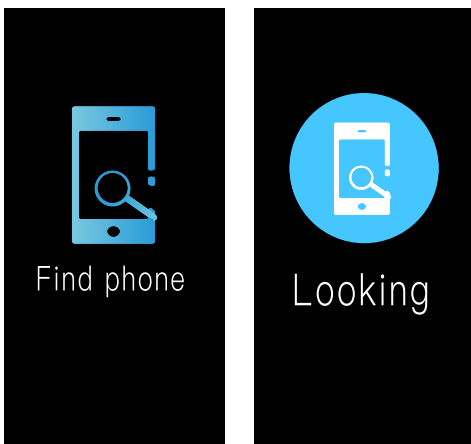


STOP WATCH

Press Stop watch icon, Press “start” to activate the function. Press “Stop” to record or Press “ Resume” to start counting again

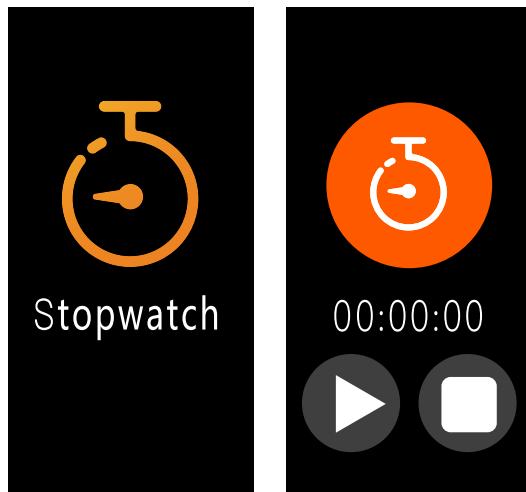


IDE ALERT

This function can be turned on through APP setting. When the device detects that the user has sat or kept still for the set time limit, the device will vibrate to remind you to move around

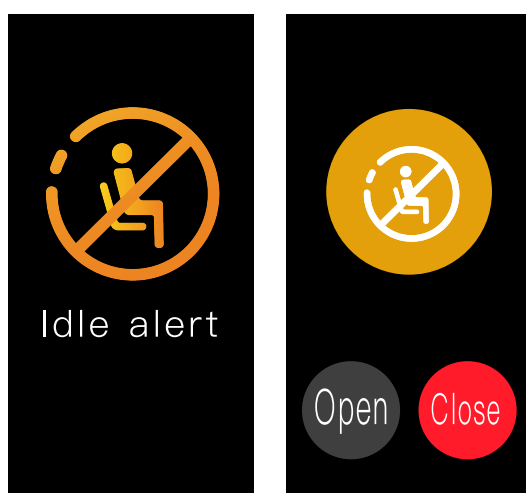


CAMERA

In order to use the device to take a remote photo, you can turn on the Camera Mode through APP setting. Then Shake the smartband to take photo

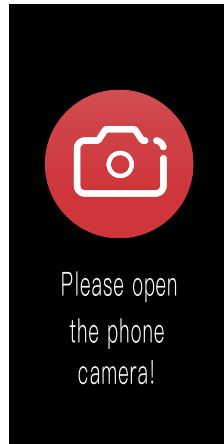

COUNT DOWN

Press Count Down then press again on the icon. In this way the count down will start.

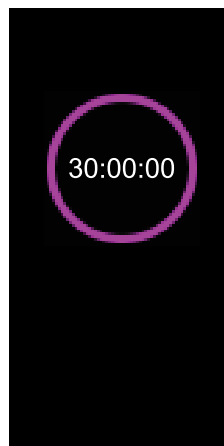


ABOUT

Press About icon, to read the smartband Version and other information.



RESET


Press on the "Reset" icon, The smartband will go back to the factory mode and restart again.

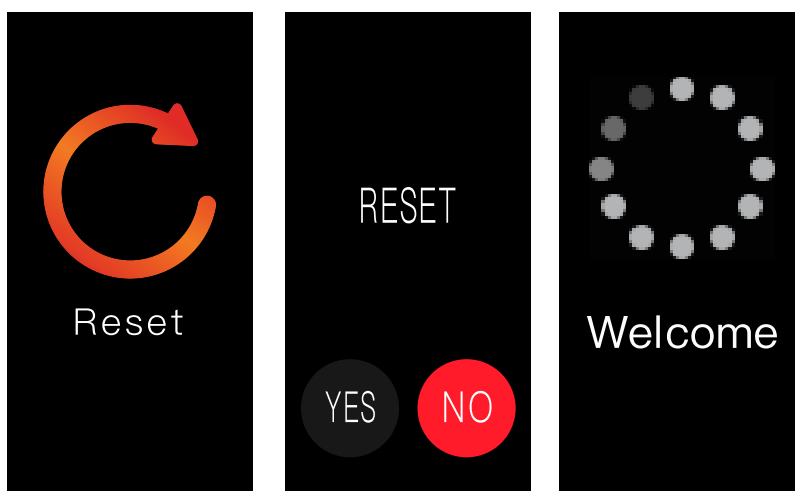

LANGUAGE


Smartband contents Six different Language:

English, Italian, Spanish, French, German and Portuguese

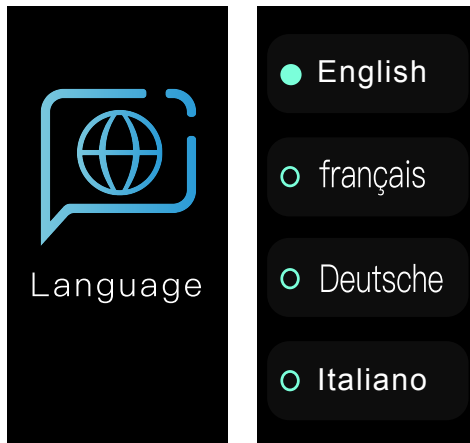

SHUT DOWN

To power off the smartband.

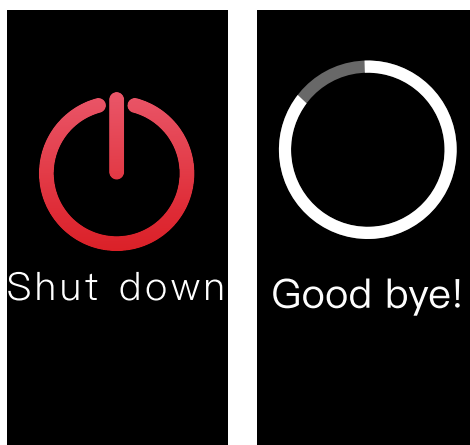





PARAMETER






Application	C-Smart
Waterproof	Ip67
Screen Size	0.96 Inch TFT Display
G-Sensor	3-Axis Sensor
Weight	26.6g
Main Part Material	PC+ABS
Strap Material	PU
Battery Capacity	110mAh
Charging Time	1hour
Usage Time	5~7 days
Standby Time	10~15 days
Fitness Tracker Size	19.5*40*10mm
Device System	Android 4.4, IOS 8.0 and Above
APP Support Language	English, German, Spanish, Italian, French, Portuguese
Fitness Tracker Support Language	Same as Above
Mileage Unit	Metric / Imperial

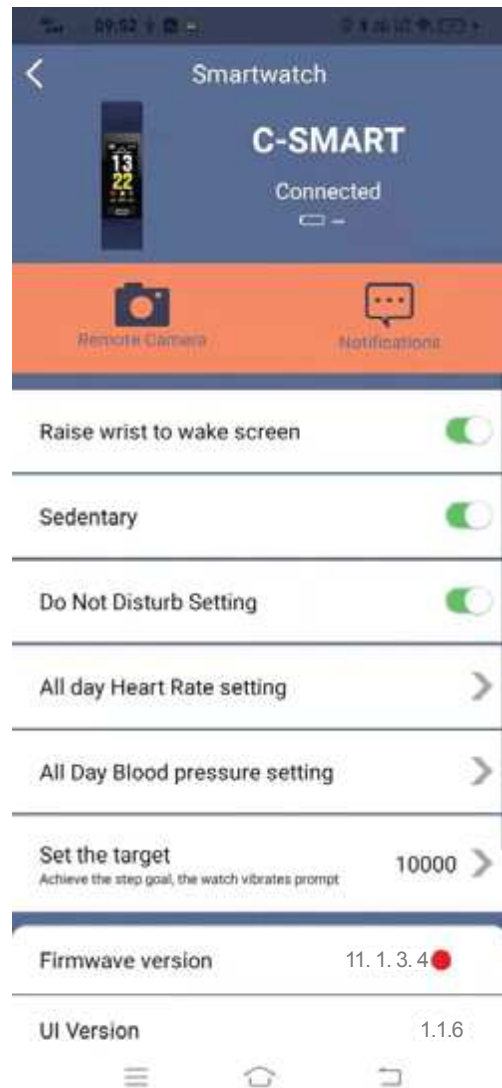THANK YOU

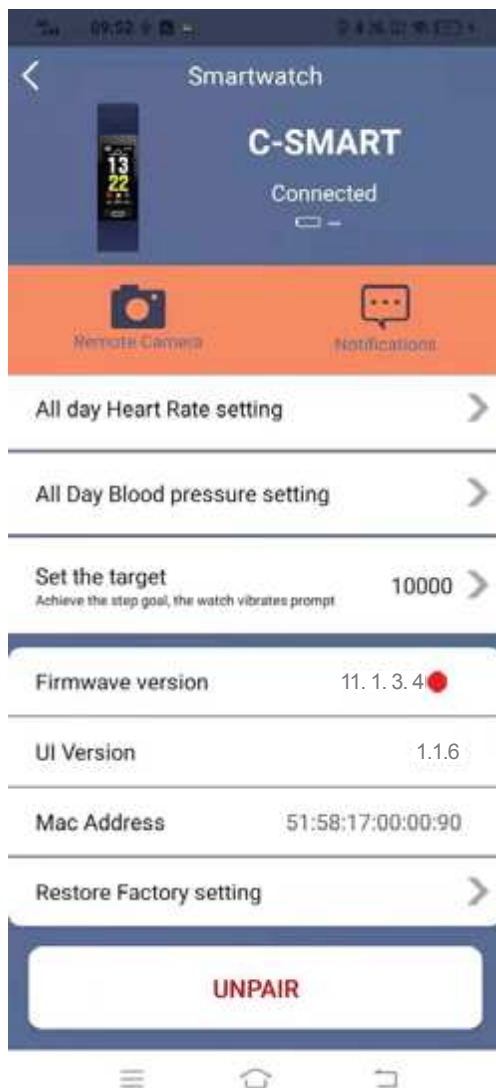APP Screen Shot





					
3 ATM	✓	✗	✗	✗	✗
5 ATM	✓	✓	✓	✗	✗
10 ATM	✓	✓	✓	✓	✓
20 ATM	✓	✓	✓	✓	✓